
Components List

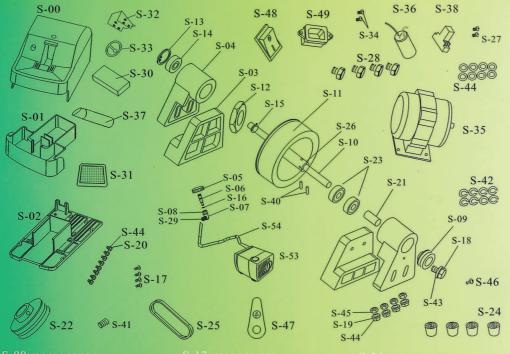

S-13: hole locking spring S-30: sponge pad

S-15: axle locking spring

S-31: filter net S-32: water-blocking plate

S-48: power switch S-53: water pump

COT-H83I

Hand Edger User's Manual




Mechanism and Accessories



Sensor: The sensor starts/stop the diamond wheel automatically when your hands approach/far away from the grinder work area. The sensor works only when needed, so you can save time and electric energy in safety. The sensor has a long service life, it can be also replaced easily.



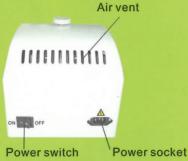

Power switch: Supply power for sensor

Air vent: Exhaust of the heat air that working

motor generates

Power socket: Connect the power plug

Area of waster water

Filter net

Area of clean water

Water circulation system: The grinder is fitted with a container for water located inside the housing. The filter net keep clean water for water pump avoiding blocked. Water can be fed to the diamond wheel with water value and sponge inside the housing, big volume of water when needed with water valve, little volume of water when needed with sponge. Water container can be pulled out freely by hand when water to be replaced after reused long. The filter net can be cleaned with reserved brush.

Attention: If the machine won't be used for long, please remember to keep the water container clean without water.



Operation Guide



Take out the machine by the lifting rope.



Pull out the water container



Pour water into the container till to the red mark of water standard scale



Connect the power plug with socket.




Move hands into the grinder work agea.

Technical Parameters

Diamond Wheel

Width 35mm Diameter 110mm

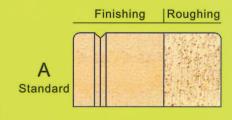

Finishing

B



Finishing

