

# CD-2800 Ultrasonic Cleaner User Instruction Manual



The vibrating of washing liquid caused by Ultrasonic wave cleans off dust, smeary bits and dirt on the surface.

Features:  
35watts of TRUE  
ULTRASONIC Power  
42,000 cycle energy wave  
quiet,solid state circuitry  
3 minutes auto shut off

■ READ ALL INSTRUCTIONS  
BEFORE USING

■ SAVE THESE INSTRUCTIONS

## SPECIFICATIONS:

NAME	Ultrasonic Cleaner	POWER SUPPLY	AC100~120V 60Hz, 35W
ITEM NO.	CD-2800		AC220~240V 50Hz, 50W
DIM.	20X12.5X14cm	TIMER SETTING	3 minutes
TANK SIZE	600ml	WT	780 g

## IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING




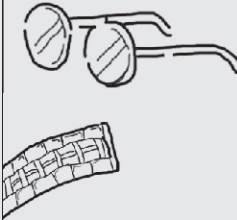 

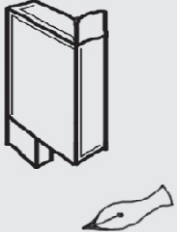 
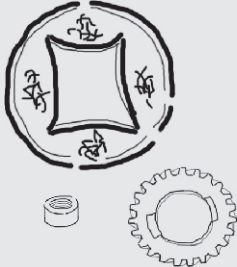 

**DANGER**—To reduce the risk of electrocution:







1. Always unplug this product immediately after using.
2. Do not use while bathing.
3. Do not place or store product where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for a product that has fallen into water. Unplug immediately.
6. The product may be off or can't be switched off when it is subjected to electromagnetic interference like Fast Transients or Surge voltage, but it can recover after being re-plugged in the socket, and then just follow the instruction described in this manual to set the function again for normal operation.




**WARNING**—To reduce the risk of burns, electrocution, fire, or injury to persons.

1. A product should never be left unattended when plugged in.
2. Close supervision is necessary when this product is used by, on, or near children or invalids.
3. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. never operate this product if it has a damaged cord or plug. If it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service centre for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never use while sleeping or drowsy.
7. Never drop or insert any object into any opening or hose.
8. This appliance is not intended for used by persons (including) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.


APPLIED USES		
Jewelry Decorations	Opticals	Commodities
		
Necklaces, Fingers, Earrings, Bracelets, etc.	Glasses, Sun-glasses, Watch chains, Waterproof watches, etc.	Electric shaver heads, Razor blades, Dentures, Combs, Toothbrushes,etc.
Stationery	Metal Articles	Dining Appliances
		
Pen-heads, Printer-heads, Signature chops, etc.	Watch Parts, Ancient coins, Badges, Valves, Machine nozzles,etc.	Slots and lines of dishware handles,etc.

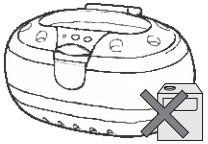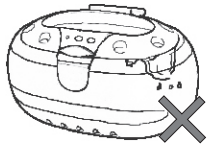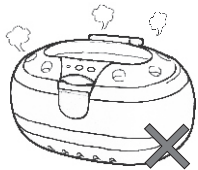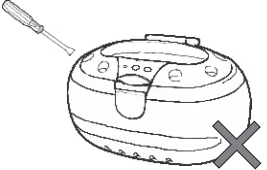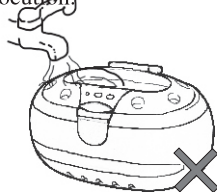     ⚠ CAUTION	
Do not clean the unit with organical solvents, diluents, abrasives.	Do not add too much water. Never let water overflow.
	
Before cleaning, filling with water is a must, otherwise the unit may be damaged.	Do not dissect the unit except the authorized serviceman.
	
Prohibit washing the complete unit with water, to reduce the risk of electrocution.	Repeat working cycle can enhance the cleaning effect. While the interval is better longer than 5 minutes.
	
Unfirmly inlaid studs on decorations may shed off during cleaning.	
Unfastened parts may also meet above problem.	
Do not merge non-waterproof watch into water.	

## Product Drawing&Indication

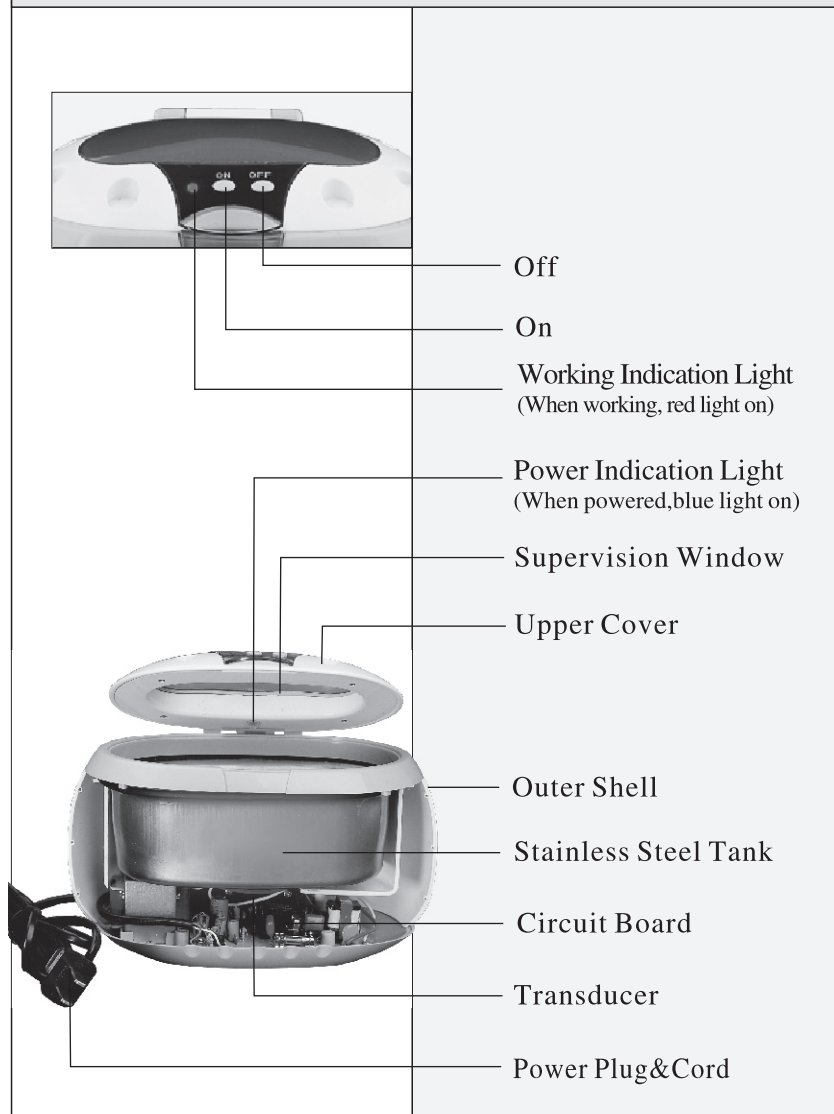 


## OPERATION GUIDANCE

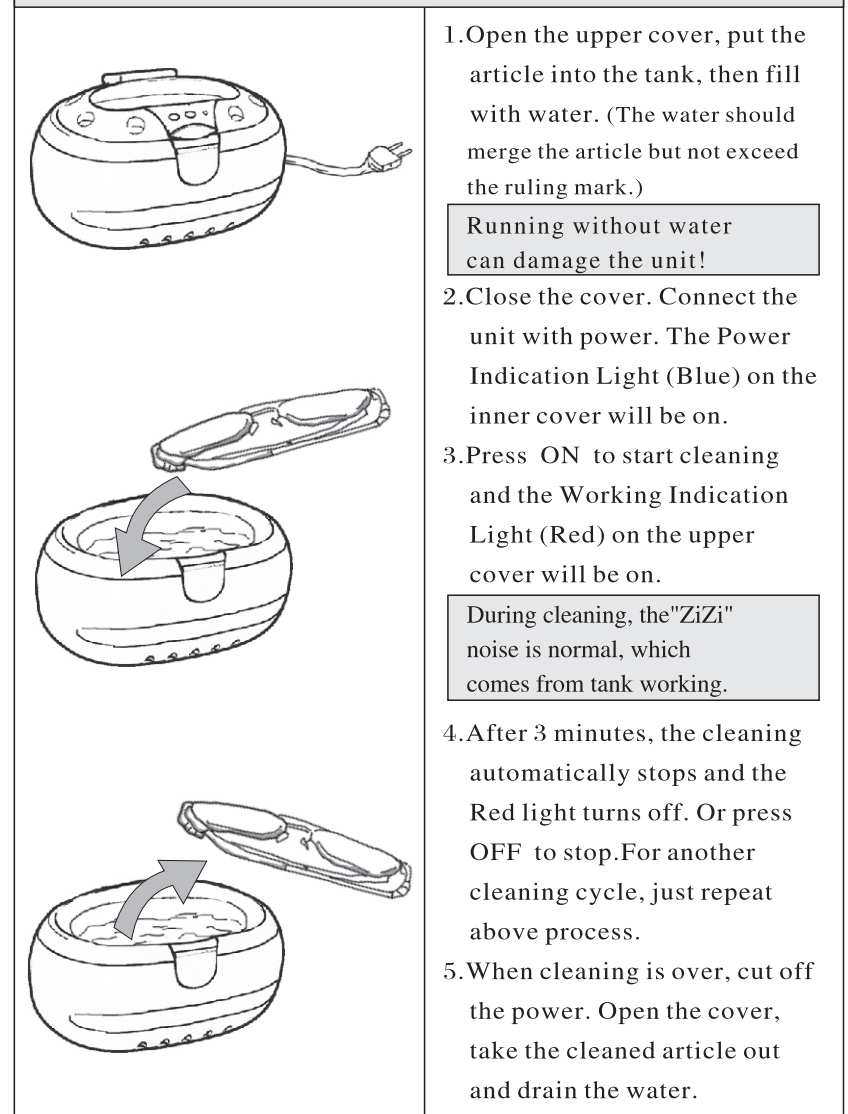 

## CLEANING METHODS:

Three cleaning methods for this unit (in different situations)
 
### General Cleaning

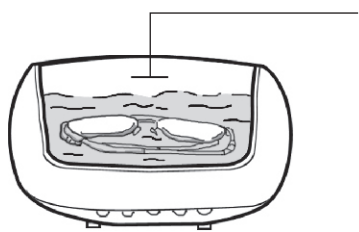

Ruling mark

Use just simple water for general cleaning. (The water should merge the article but not exceed the ruling mark.)


### Enhanced Cleaning



 In professional places, use special cleaning liquid.


For smeary hardware, adding about 5ml detergent into water to enhance cleaning.

### Partly Cleaning

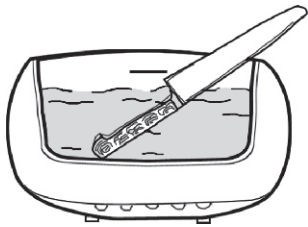

For large articles, partly cleaning as shown.

## USER MAINTENANCE

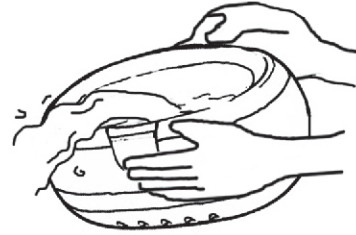 

1. Do not leave the cleaned article in the tank after cleaning.

2. Before drain the water, do cut off the power.

3. Clean the tank with water after using. (especially after using detergent.)

4. Wipe the tank with towel.

Prohibit washing the complete unit with water to reduce the risk of electrocution.

5. Keep cool and dry.

6. Any repair should be performed by authorized service centers in our Guarantee Book.

