


Pattern Maker

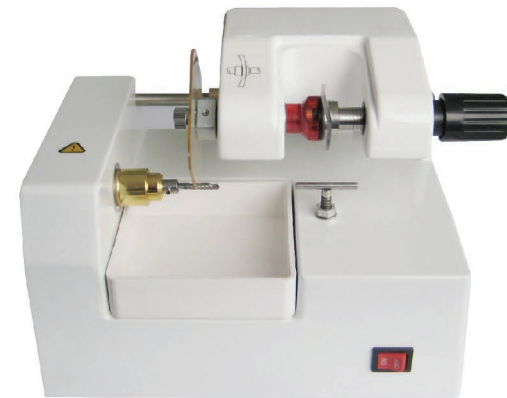

Manual

1. Safety Precautions

- (1.) Don't use this machine for other purposes except for patterning ;
 - (2.) While the machine is working ,don't touch the rotary blade to avoid getting injured;
 - (3.) Don't use this machine when the power requirement (voltage and frequency) are not reached,you should be clear about the actual working power supply;
 - (4.) Don't put the machine at the place of high temperature and insolate in sun shine.
 - (5.) If any liquid or other materials drop into the machine, turn the switch off immediately and pull the plug out of the wall socket; Please don't start the machine again until the machine is thoroughly checked and repaired by an expert in this line;
 - (6.) Don't install other parts at will except the original parts of this machine;
 - (7.) Don't operate the machine over-worked, don't dash any parts of this machine.
- We reserve the right to change the information and instruction of the manual, we won't notice separately and do not bear the responsibility.

2. How To Use

1. Select a liner lens or lens to make template firstly, fix the suction disc in the central position of liner lens or lens, then install them to the chuck device and clamp to ready for making a template.
2. Put the template to the position of placing template (as shown) and fix it by a screw.
3. Turn on the switch and put down the machine head slowly, keep the template in the central position of miller.
4. Lift the machine head upward after the template rotates for a circle, carefully take down the template finished, and then trim the burr on the edge of template with the miller.

3. Name of Parts

