

PHOTOCHROMIC LENS TESTER



OPERATION MANUAL

Dear users:

Thank you for selecting our product which is very convenient to use.

In order to help you grasp the directions for using this machine and prolong its life of use, you are advised to read this manual carefully before the first use of this machine.


I Property of product

Welcome use the tester, it can make photochromic lenses to colour in a moment. Please close the protection cover while you use it.

II Operation Procedure

1. Open the protective cover.
2. Put the photochromic lenses convex face upward on the flashing lamp.
3. Close the protective cover.
4. Press the button switch and wait 3 seconds until the indicator do not flash.
5. Open the protective cover and take out the photochromic lenses, you can find them be coloured.

III Name of parts

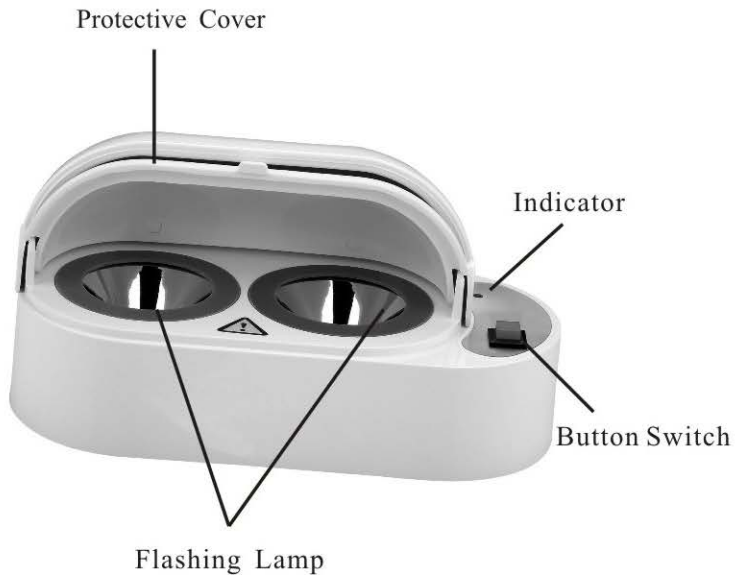

IV WARING:

1. Do not press the button switch more than 20times, otherwise it will be caused short-circuit.
2. There is hight voltage in the instrument, do not open it except professional electrician.